


HUPF Series

GAS PRESSURE REGULATOR WITH
INCORPORATED FILTER

INSTRUCTION SHEET

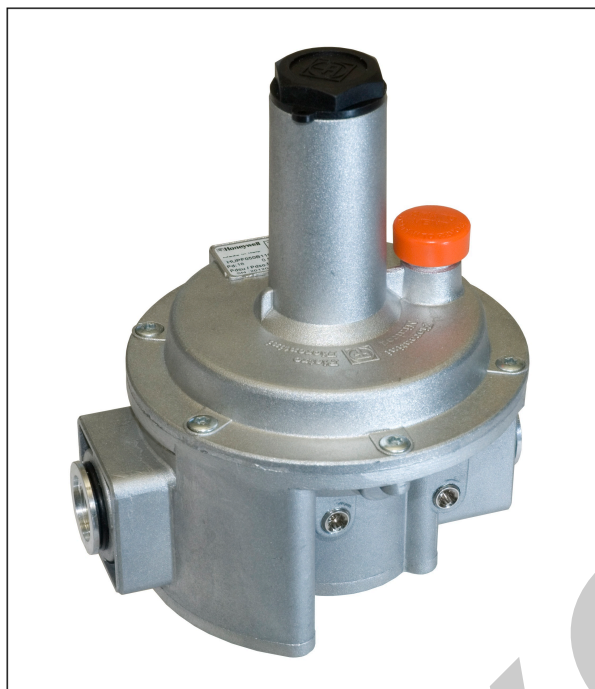

DESCRIPTION

Spring-loaded regulator with inlet pressure compensation and zero shut-off.

The outlet pressure is kept constant with changing gas flow as a function of the spring setting. The zero shut-off prevents the outlet pressure from increasing when there is no gas flow through the regulator.

APPLICATION

To regulate gas and air inlet pressure for gas burners, including mixed and combined systems and in industrial distribution systems.

Applicable types of fuel:

- manufactured gases (town gas)
- natural gases (group H - methane)
- liquefied petroleum gas (LPG)
- non-aggressive gases
- air

The gas pressure regulators comply with the requirements of EN88-1, class B, group 2.

These gas pressure regulators are available in two versions; with or without incorporated filter, see product range page 2.

SPECIFICATION

Product range

Model HUPF (pipe sizes 1/2" up to DN 100) with filter.

Dimensions

See dimensional drawing and table on page 4.

Pipe size

1/2" up to 2" inlet and outlet internal pipe thread according ISO 7-1.
DN40, DN50, DN65, DN80 and DN100 inlet and outlet flange connections according to ISO 7005 EN 1092-4

Connections

Inlet pressure tap connections.

Capacity

See Capacity curves HUPF Series on page 6.

Maximum working pressure

500 mbar

NOTE: minimum inlet pressure range:

desired outlet pressure +2.5 mbar up to 500 mbar.

Outlet pressure range

5 to 300 mbar

The appropriate outlet pressure range is obtained by the use of different springs.

NOTE: The regulators are supplied standard with a white spring - see „Spring setting range" below

Closing pressure

Conform EN 88-1 specification (i.e. zero shut-off)

Torsion and bending stress

Pipe connections meet group 2, according to EN 88-1 requirements.

Set point accuracy

According to EN88-1, class A group 2.

Max. allowed pressure

Up to 1 bar without body damages

Ambient temperature range

-15 °C....+60 °C

Material of pressure receiving parts

Elastomer EN549

Sealing elements

Hydrocarbon resistant NBR rubber type NBR 70

Safety diaphragm

An external breather/outlet pipe is not necessary as the incorporated safety diaphragm ensures that, in the event of

breakage of the operating diaphragm. No gas leakage into the environment of over 30dm³/h is possible. The above in compliance with para. 3.3.2. of UNI EN 88 specification.

Body material

Aluminium alloy die cast EN AB 46100, EN AB43100

Internal parts

AISI 304/Delrin

Filter

HUPF Series only.

Filter element Synthetic fiber DVGW G260/1

Filtering grade

= 50µ

Standard and Approvals

The HUPF Series gas pressure regulator with and without incorporated filter conform to the following EC-directives:

- Gas Appliance Directive (90/396/EEC)
PIN: 0063AR4719

Adjustment spring range

Model	HUPF015B110 HUPF020B110 HUPF025B110	HUPF032B110 HUPF040B110	HUPF050B110 HUPF050B310	HUPF065B310 HUPF080B310 HUPF100B310	Old Models		
					HUPF065B310 HUPF080B310	HUPF100B310	Spring code
Range (mbar) and colour	Spring code				Range (mbar)	Range (mbar)	
5 - 13 Green	HRSP150M1	HRSP153M1	HRSP155M1	HRSP156M1	7 - 17	3 - 9	HRSP156M1
7 - 20 Red	HRSP150M2	HRSP153M2	HRSP155M2	HRSP156M2	10 - 25	5 - 13	HRSP156M2
10 - 30 White	HRSP150M3	HRSP153M3	HRSP155M3	HRSP156M3	12 - 33	7 - 20	HRSP156M3
25 - 70 Yellow	HRSP150M4	HRSP153M4	HRSP155M4	HRSP156M4	25 - 75	10 - 40	HRSP156M4
65 - 150 Violet	HRSP150M7	HRSP153M7	HRSP155M7	HRSP156M7	65 - 160	35 - 120	HRSP156M7
140 - 300 Orange	HRSP150M8	HRSP153M8	HRSP155M8	HRSP156M8	140 - 300	100 - 240	HRSP156M8

INSTALLATION

Important

1. **Read these instructions carefully. Failure to follow the instructions could damage the product or cause a hazardous condition.**
2. **The installation has to be carried out by qualified personnel only.**
3. **Carry out a thorough checkout when installation is completed.**



Warning

- Turn off gas supply before installation.
- Do not remove the seal over regulator inlet and outlet, until ready to connect piping.
- Do not remove the perforated diaphragm breather cap (3) and do not obstruct the hole.
- The regulator must be installed so that the arrow on the regulator points in the direction of the gas flow.

Mounting position

To ensure perfect regulator operation, regulator should be assembled horizontally. They can however be installed in different positions up to an angle of 90°.

Mounting location

Contact between the regulator and walls or a floor is not permitted. Maintain a distance of at least 50 mm.

Note: In case of the HUPF Series, the distance between the bottom and the ground must be at least 400 mm, to facilitate filter cleaning and inspection.

Main gas connection threaded regulators

- Take care that dirt cannot enter the gas regulator during handling.

- Ensure the gas flow in the same direction as the arrow on the housing of the gas regulator.
- Use a sound taper fitting with thread according to ISO 7-1 (BS21, DIN 2999) or a piece of new, properly reamed pipe, free from swarf.
- Do not thread or tighten the pipe or pipe fitting too far. Otherwise regulator distortion and malfunction could result.
- Apply a moderate amount of good quality thread compound to the pipe or fitting only, leaving the two end threads bare. PTFE tape may be used as an alternative.
- In order to tighten the pipe in the regulator, do not use the sleeve of the upper cover as a lever but use a suitable wrench operating on the wrench bosses.

Main regulator connection flanged regulators


- Take care that dirt cannot enter the gas regulator during handling.
- Ensure the gas flow in the same direction as the arrow on the housing of the gas regulator.
- Ensure that inlet and outlet flanges are in line and separated from each other enough to allow the regulator to be mounted between them without damaging the gasket.
- Place gasket. if necessary grease it slightly to keep it in place.
- Mount gas regulator between flanges using the bolts for each flange.



Warning

Tightness test after installation

- Spray all pipe connections and gaskets with a good quality gas leak detection spray.
- Start the appliance and check for bubbles. If a leak is found in a pipe connection, remake the joint. A gasket leak can usually be stopped by tightening the mounting screws. Otherwise replace the gas pressure regulator.

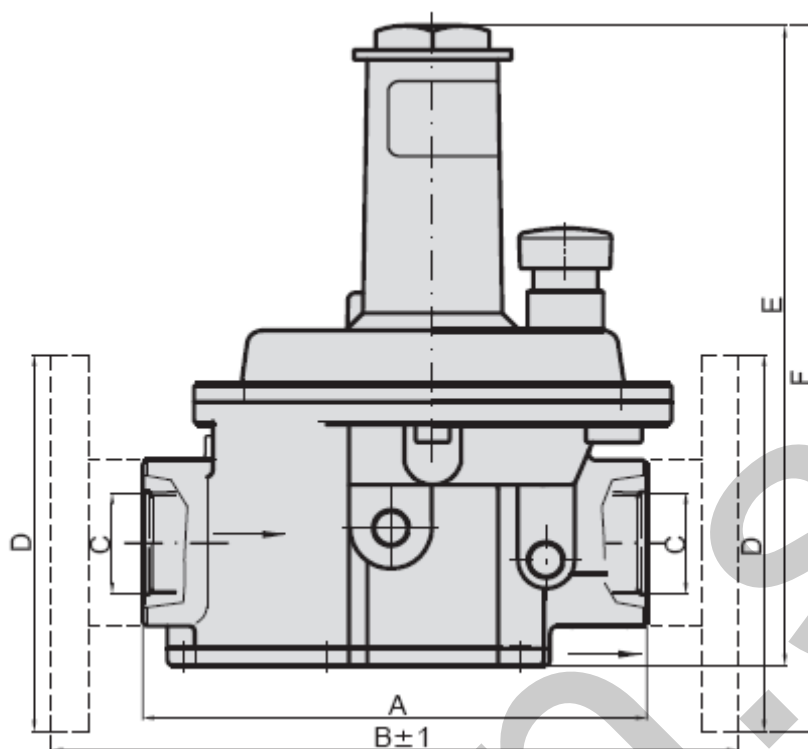

Governors with built in filter

Model	Connection (inch)	Max. operating pressure (mbar)	Overall dimensions (mm)					
			A	B	C	D	E	F
HUPF015B110	1/2"	500	138		1/2"		175	
HUPF020B110	3/4"	500	134		3/4"		175	
HUPF025B110	1"	500	134		1"		175	
HUPF032B110	1"1/4	500	194		1"1/4		255	
HUPF040B110	1"1/2	500	194		1"1/2		255	
HUPF050B110	2"	500	236		2"		316	
HUPF040B310	DN40	500		311		DN40		285
HUPF050B310	DN50	500		352		DN50		349
HUPF065B310	DN65	500		350		DN65		427
HUPF080B310	DN80	500		350		DN80		434
HUPF100B310	DN100	500		415		DN100		502

ADJUSTMENTS



Caution

- Adjustments must be made by qualified personnel only!

Outlet pressure adjustment

(Tolerance: better than 15% of outlet pressure setting)


1. Remove the upper cap (1).
2. To obtain the required outlet pressure value, turn the set screw (4). Turn this set screw clockwise to increase the outlet pressure, counter-clockwise to decrease it.
3. Clearly mark the adjusted value of the outlet pressure.
4. Replace the upper-cap (1) and seal it with lead if necessary.

Replacing spring

1. Remove the upper-cap (1) of the pressure regulator.
2. On fully unscrew the ring nut (4)
3. Remove old and replace new spring.
4. Screw the ring-nut (4) back in.
5. Adjust the required outlet pressure by proceeding with step 1 to 4 of „Outlet pressure adjustment“ section on this page.

Final checkout of the installation

Set the appliance in operation after any adjustment and observe several complete cycles to ensure that all burner components function correctly.

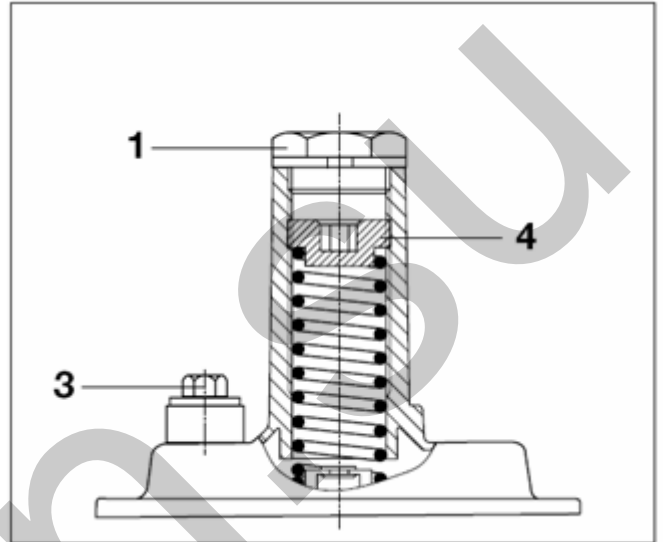

MAINTENANCE

The regulators are completely maintenance-free. In the event of a breakdown, a general overhaul and factory testing is recommended.

Filter maintenance (HUPF)

1. Remove the screws at the bottom of the gas regulator and remove the cover.
2. Remove the filter cartridge and/or membrane and clean the filter housing thoroughly.
3. Replace the old filter element and/or membrane with the new one.
4. Reassemble the cover, ensuring that the guides inside the cover is aligned with the filter cartridge.
5. Tighten the screws, and check for gas leak by performing a tightness test.

Replacement filter cartridges

Filter Cartridge	Used with model
KTFL3-2100A	HUPF015/020/025 (current)
KTFL3-2200A	HUPF032/040 (current)
KTFL3-2300A	HUPF050B (current)
KTFL3-2400A	HUPF065B (< F300877) and for HUPF080B (< F300297)
KTFL3-2600A	HUPF065B/080B/100B (current)
KTFL3-2500A	HUPF100 (< F301437)

Replacement membrane kits


Membrane Kit	Used with model
KTMB3-0400A	HUPF032/040 (before F302555)
KTMB3-0500A	HUPF050 (before F301805)
KTMB3-1300A	HUPF032/040 (between F302565 and F301816)
KTMB3-1400A	HUPF050 (between F301815 and F301086)
KTMB3-1500A	HUPF065 (before F300877) and for HUPF080B (before F300297)
KTMB3-1600A	HUPF100 (before F301437)
KTMB3-1700A	HUPF050 (current)
KTMB3-1800A	HUPF032/040 (current)
KTMB3-1900A	HUPF065/080/100 (current)

Explanation of HUPF-series date code


The date code format this is printed on the label has the format: **PL:F3ydddy**

F3 indicates a governor, yddy are the year (yy) and the day (ddd)

Example: F311720. This is a HUPF governor, produced on day 172 in the year 2010

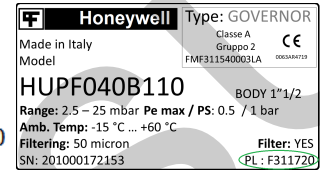

Capacity curves of HUPF series with regulator in stable position
(m³/h natural gas at 1013mbar, 15C°)

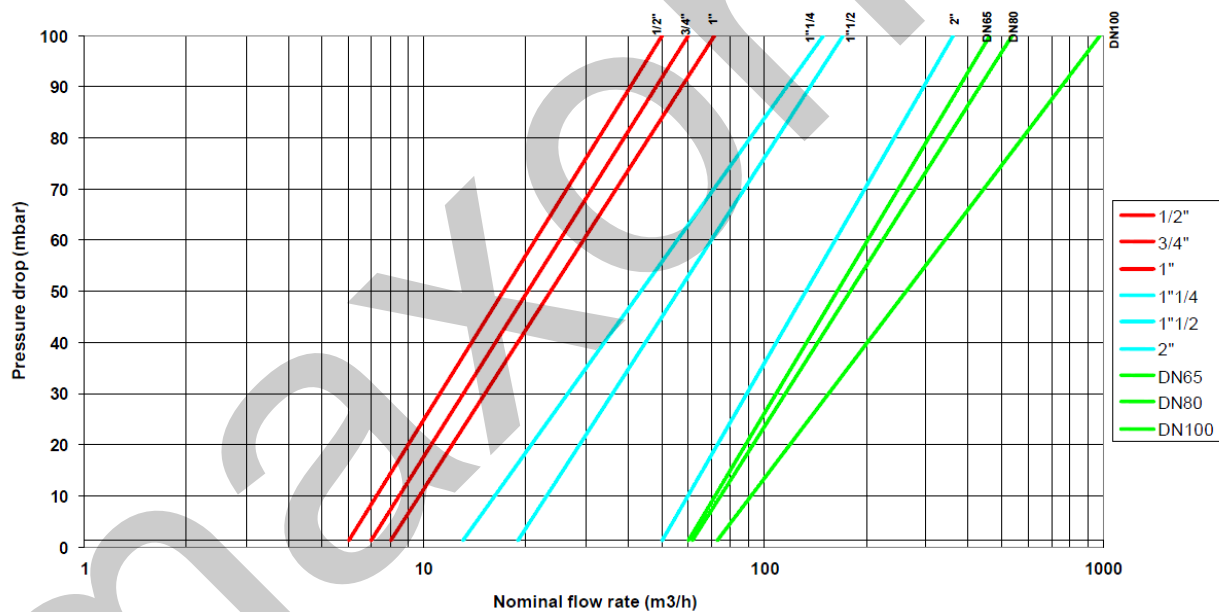

Honeywell

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Särl, 1180 Rolle, Z.A. La Piece 16, Switzerland by its Authorized Representative:

Automation and Control Solutions
 Combustion Controls Europe
 Honeywell BV
 Phileas Foggstraat 7
 7821 AJ Emmen
 The Netherlands
 Tel.: +31 591 695911
 Fax: +31 591 695200
<http://europe.hbc.honeywell.com>